



RH LOGIC 200 & 220

An RH chair is the perfect work tool, a chair that puts you in an optimal position all day, every day. A few simple adjustments is all it takes to make your RH chair fit your individual anatomy. RH chairs support an upright posture and active sitting, increasing your performance.

Ergonomics

Providing complete support in any working position, enabling you to always sit correctly and breathe properly.

- The seat has rounded front and waterfall edge to reduce pressure on thighs. The depth of the seat can be adjusted separately.
- Sculptured shape provides comfort, keeps the back upright and gives support in any position. The pronounced "Tvedt cushion" encourages movement, upright position and open posture.
- Separately adjustable backrest angle for support in any position. Defined support for the lower back and with inflatable lumbar pump as standard.
- Pictograms on all handles and levers make the chair easy to use, easy to understand. The controls can be accessed even when seated.
- Comfort layer as standard gives increased comfort feel.
- Frictional tilt mechanism follows your every movement, easily lockable in any chosen position. The tilt resistance is quickly adjustable from 40 kg – 150 kg in 7 turns.
- Armrests are optional and adjustable (height, width, depth and turnable) The optional neck rest can be adjusted in height and depth.
- Easily interchangeable seat and back that can be clicked on and off.

Quality

- 10 year guarantee

Flokk is certified in accordance to:

- ISO 9001
- ISO 14001

RH Logic is certified in accordance to:

- EN 1335-1-2-3 Class A
- Möbelfakta
- BS 5459-2
- ANSI/BIFMA X5.1
- GS
- NPR 1813

Environment

- In compliance with Flokks environmental profile and credibility (CSR)
- Easy to disassemble and no glue or harmful chemicals
- EPD (ISO14025)
- GREENGUARD GOLD

Design

Materials and surfaces communicating comfort and wellbeing through bodyfitting forms. Expressing human performance.

Fire classifications

Foams and standard fabrics are tested to BS/EN 1021-1&2 (cigarette & match). Foam and fabric according to BS-5852 ignition source 5 (crib 5) can be delivered on request. Please contact our customer service for further information.

Maintenance

Vacuum clean the chair with a furniture brush or wipe it with a clean cloth or sponge slightly dampened with lukewarm clean water. Do not remove any plastic parts or attempt to open the seating mechanism. Contact your Flokk dealer if the chair requires servicing or maintenance.

See <https://info.flokk.com/global/rh/user-guide> for RH Logic 200 & 220 interactive user instruction guide.



Normal use up to 9 hour/day

RH LOGIC 200 & 220



MEASUREMENTS

	RH LOGIC 200	RH LOGIC 220
Seat depth with seat slide	386-484 mm	400-499 mm
Seat depth	477mm	477 mm
Seat width	442 mm	442 mm
Seat height - standard gas stem	406-550 mm	406-550 mm
Seat angle adjustment	+8.6°/-15.5°	+8.6°/-15.5°
Height of lumbar support above the seat	153-257 mm	135-233 mm
Backrest height	518 mm	620 mm
Backrest height adjustment (from seat)	490-588 mm	581-681 mm
Backrest width	431 mm	433 mm
Back angle adjustment	19°	19°
Height of armrest above seat	199-315 mm	199-315 mm
Distance between armrests	318-515 mm	318-515 mm
Diameter of base	680 mm	680 mm

OPTIONS

Neck rest Fabric
 Neck rest Leather
 Armrest 8L upholstered top, standard black leather
 Armrest 8L top in TPU
 Uniform upholstery back and seat
 Upholstered back shell
 Decorative stitching (only for standard model)

Coat Hanger
 Base 5T Polished
 Castor for hard floors
 Castor lockable
 XL seat
 Coccyx seat

GAS STEMS

Gas steam 4T Black
 Gas steam B Black
 Gas steam A Black

For other options see the RH Price List.

The design and specifications of RH Chairs' products are developed on an ongoing basis and the above formulations should not be perceived as completely final.

Dimensions referes to EN 1355-1:200